



WARNUNG

Gefahr des Verlusts der Text-Bild-Zuordnung beim Ausdruck.

- Aus technischen Gründen kann derzeit nicht ausgeschlossen werden, dass trotz einwandfreier Darstellung auf dem Bildschirm beim Ausdruck der Zusammenhang von Text und zugehörigem Bild verloren geht.
- Wird der Fehler nicht bemerkt, besteht die Gefahr, daß Arbeiten nicht korrekt durchgeführt werden und es dadurch zu Personen- und Sachschäden kommt.

→ Vergleichen Sie deshalb nach dem Druckvorgang unbedingt die Ausdrucke mit der Bildschirmdarstellung. Korrigieren Sie die Ausdrucke im Fehlerfall so, daß der Inhalt der Bildschirmdarstellung zutreffend wiedergegeben wird.



WARNING

Danger of losing text-figure correspondence when printing out.

- For technical reasons, it can currently not be ruled out that the correspondence between text and associated figure can be lost when it is printed out, even though the display on the screen is correct.
- If the fault is not noticed, there is the danger that work will not be performed correctly which can cause injury and damage.

→ Therefore, always compare printouts with the screen display after printing them out. Correct the printouts if they are faulty so that the content of the screen display matches that on the printouts.



AVERTISSEMENT

Risque de perte de la correspondance texte-illustration lors de l'impression papier.

- Pour des raisons techniques, il ne peut pas être exclu à l'heure actuelle que, même en cas d'affichage correct à l'écran, la correspondance entre le texte et l'illustration puisse être erronée sur l'impression papier.
- Si l'erreur passe inaperçue, on court le risque d'exécuter certaines opérations de manière incorrecte pouvant conduire à des dommages corporels et matériels.

→ Comparez impérativement pour cette raison les impressions papier avec l'affichage à l'écran.

Corrigez-les en cas d'erreur de manière à reproduire correctement l'affichage à l'écran.



ATTENZIONE

Pericolo di perdita dell'abbinamento testo-immagine nella stampa.

- Per motivi tecnici non è escluso che, nonostante la rappresentazione sullo schermo risulti perfetta, durante la stampa venga persa la corrispondenza fra testo e relativa immagine.
- Se tale difetto non viene rilevato vi è il pericolo che i lavori non siano eseguiti correttamente; ciò può avere come conseguenza lesioni e danneggiamenti.

→ Per questo motivo, dopo la stampa è assolutamente necessario confrontare le stampe con la rappresentazione sullo schermo. In caso di errore si prega di correggere le stampe, così da garantire la riproduzione esatta della rappresentazione sullo schermo.



ADVERTENCIA

Al imprimir se corre el riesgo de perder la correcta asignación de las figuras al texto.

- Por motivos técnicos, por el momento no se puede descartar que, aun siendo correcta la imagen que aparezca en la pantalla, al imprimir se pierda la correlación entre el texto y la figura correspondiente.
- Si este error pasara desapercibido, existe el riesgo de que los trabajos no se ejecuten de forma correcta y, por tanto, se produzcan daños personales y materiales.

→ Por ello le rogamos que tras el proceso de impresión compare siempre las copias impresas con la imagen de la pantalla. En caso de error, corrija las copias impresas de forma que se correspondan con el contenido de la imagen de la pantalla.


70 19 19 Removing and installing trim under dashboard - as of MY 2003

- Removing trim panel under dashboard
- Installing trim panel under dashboard

Removing trim panel under dashboard


Removing trim under the dashboard on the driver's side

Installation Location:

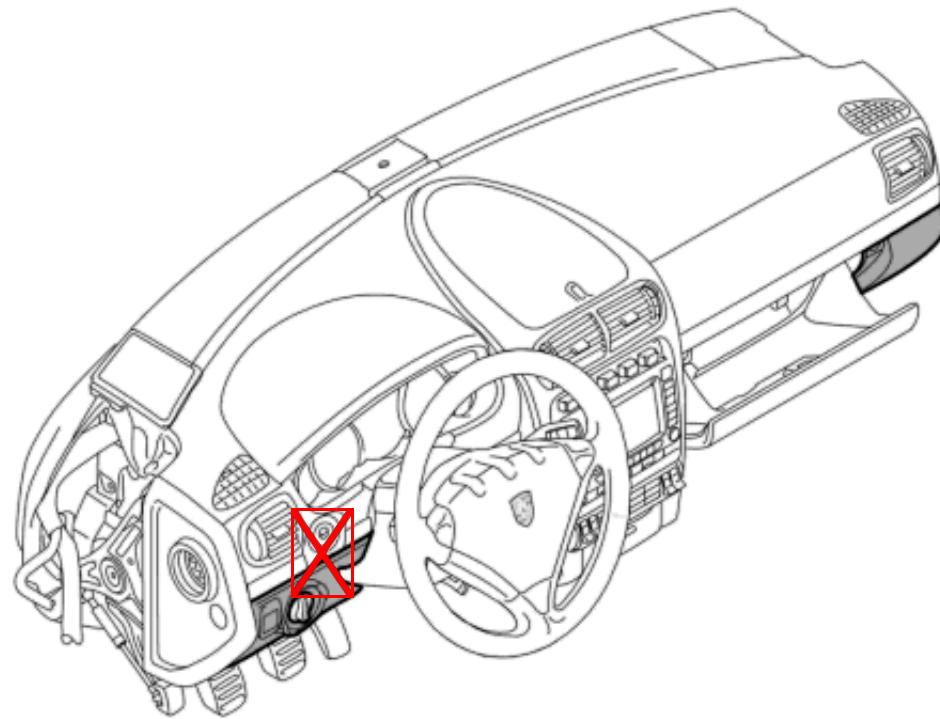



1. Remove dashboard moulding on driver's side. → 705819 Removing and installing dashboard moulding - "Removing" section

2. Remove cover under dashboard on driver's side.→ 702219 Removing and installing cover under dashboard - "Removing" section
3. Remove ignition key.
4. Remove fuse box cover.
 - 4.1. Unclip fuse box cover **1**- using a plastic wedge on the retaining clips **2**- and swivel it outwards **arrow A** .
 - 4.2. Remove the fuse box cover **1**- to the rear **arrow B** .

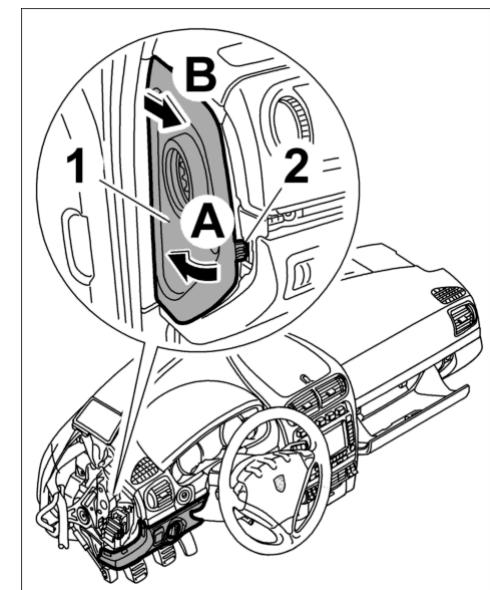


5. Remove trim panel under dashboard on the driver's side.
 - 5.1. Unscrew the fastening screws **3**- and swivel the trim panel under the dashboard on the driver's side **4**- downwards **arrow C** . Pull out the trim panel under the dashboard on the driver's side **4**- over the guide **5**- (**arrow D**).

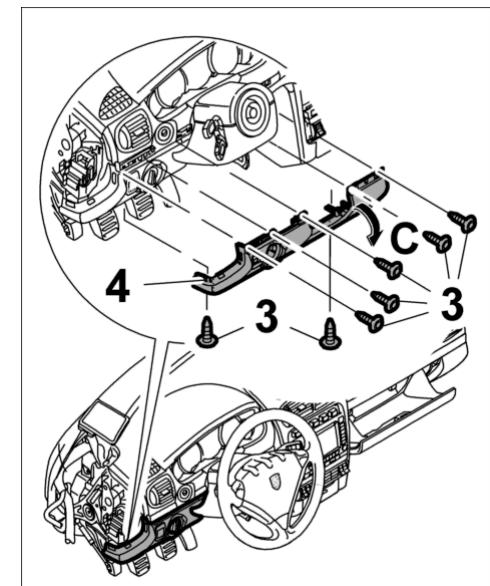

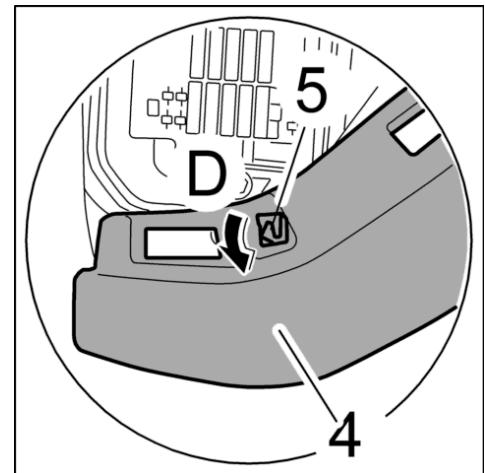


6. Disconnect the plug connections.

6.1. Release **-6 and 7-** and pull off **-arrows E-** plug.

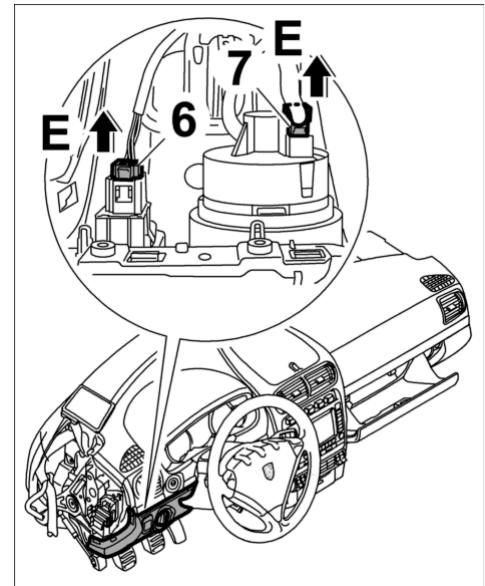


7. Unclip the bowden cable for the parking brake release.

7.1. Using a screwdriver, carefully unclip the sleeve **-8-** and ball joint **-9-** of the Bowden cable upwards out of the release lever **-10-** (**-arrow-**).

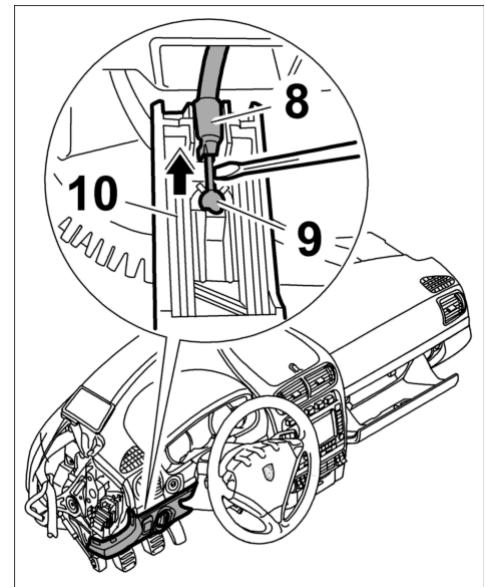


8. Take off the trim panel under the dashboard on the driver's side.
- 8.1. Pull the trim panel under the dashboard on the driver's side **4-** out of the guides **11-** (**-arrow F-**) and take it out towards the rear.

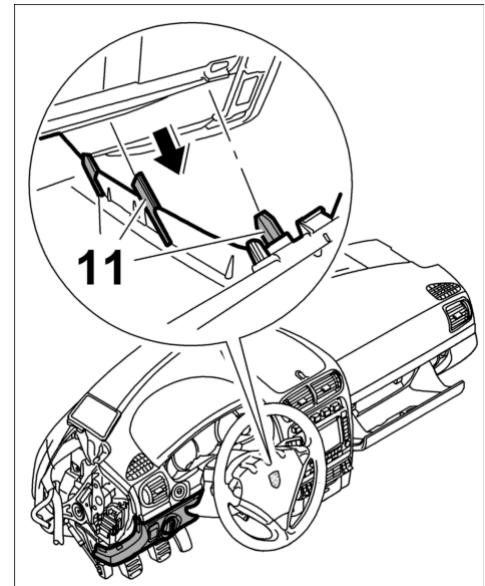


Removing the cover under the instrument panel on the passenger's side

Installation Location:

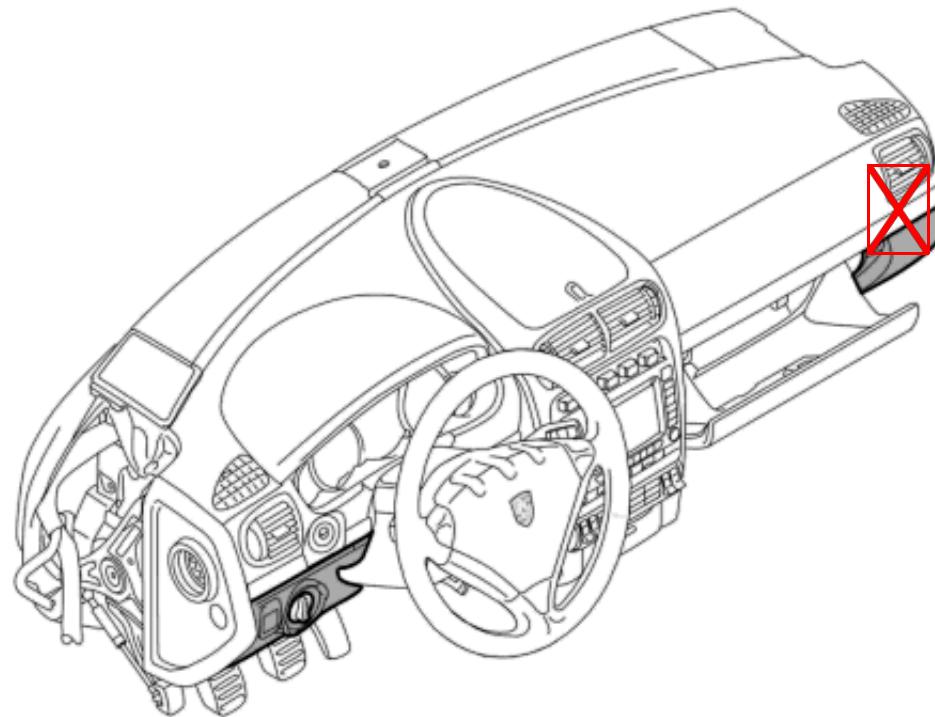


1. Remove dashboard moulding on passenger's side. → 705819 Removing and installing dashboard moulding on passenger's side - "Removing" section



2. Remove cover under dashboard on the passenger's side. → 702219 Removing and installing cover under dashboard - "Removing" section
3. Remove ignition key.
4. Loosen glove compartment.
 - 4.1. Undo fastening screws **2**.
 - 4.2. Open glove compartment **1**, unscrew the fastening screw **4** and remove rubber buffer **3**.

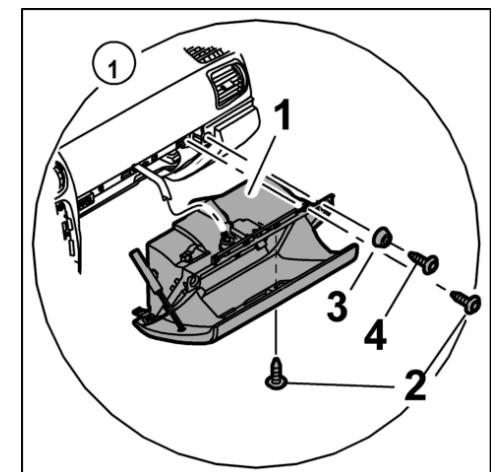


5. Remove fuse box cover.
 - 5.1. Unclip fuse box cover **5** using a plastic wedge on the retaining clips **6** and swivel it outwards (**-arrow A-**).
 - 5.2. Remove the fuse box cover **A** to the rear (**-arrow B-**).

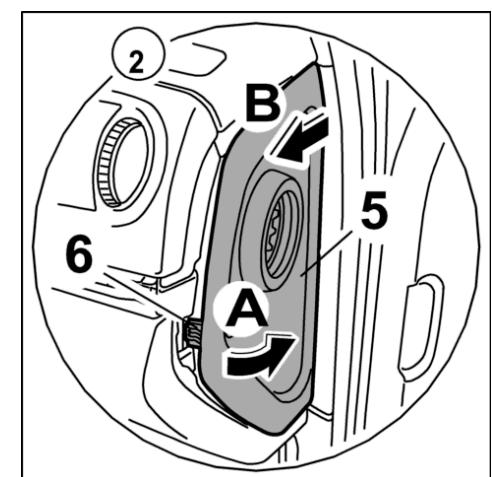


6. Remove trim under dashboard at passenger's side.
 - 6.1. Unscrew the fastening screws **8** and swivel the trim panel under the dashboard on the passenger's side **7** downwards (**-arrow C-**). Pull out the trim panel under the dashboard on the passenger's side **7** over the guide **9** (**-arrow D-**).

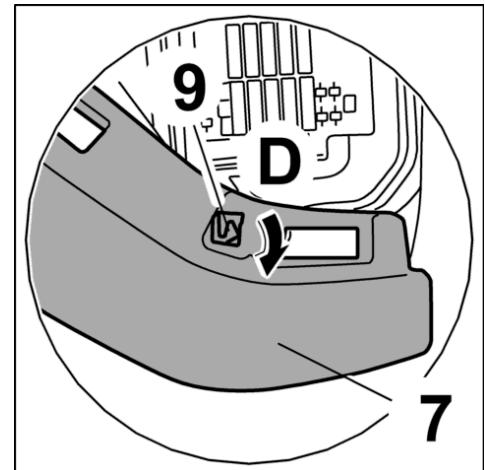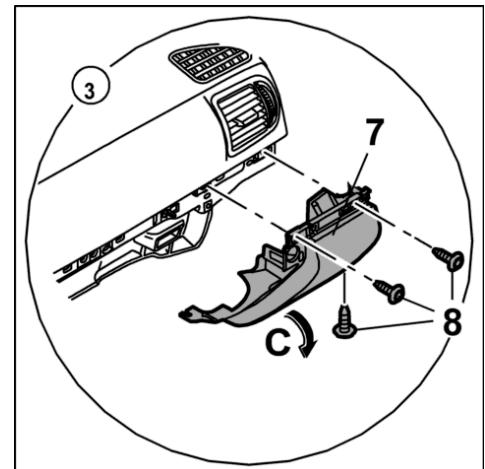

7. Disconnect the plug connection switch for the passenger's airbag.
 - 7.1. Release the plug **-10-** at the locking mechanism **-11-** (**-arrows E-**) and pull it off.

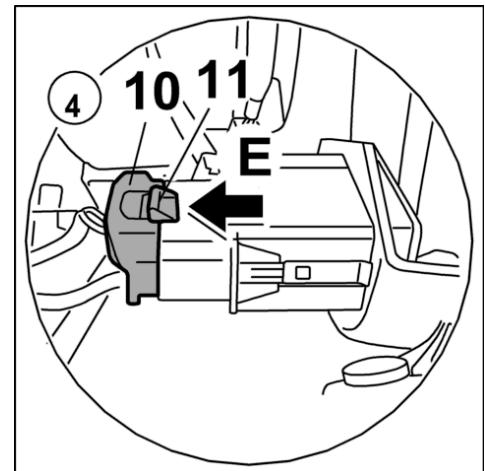


8. Remove the trim under the dashboard on the passenger's side **-7-**.

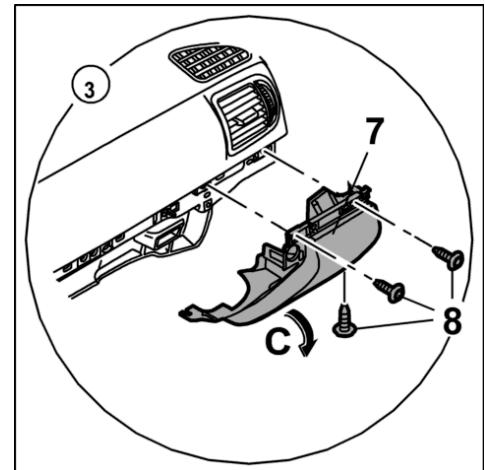

Installing trim panel under dashboard



Installing trim under dashboard on the driver's side

Installation Location:

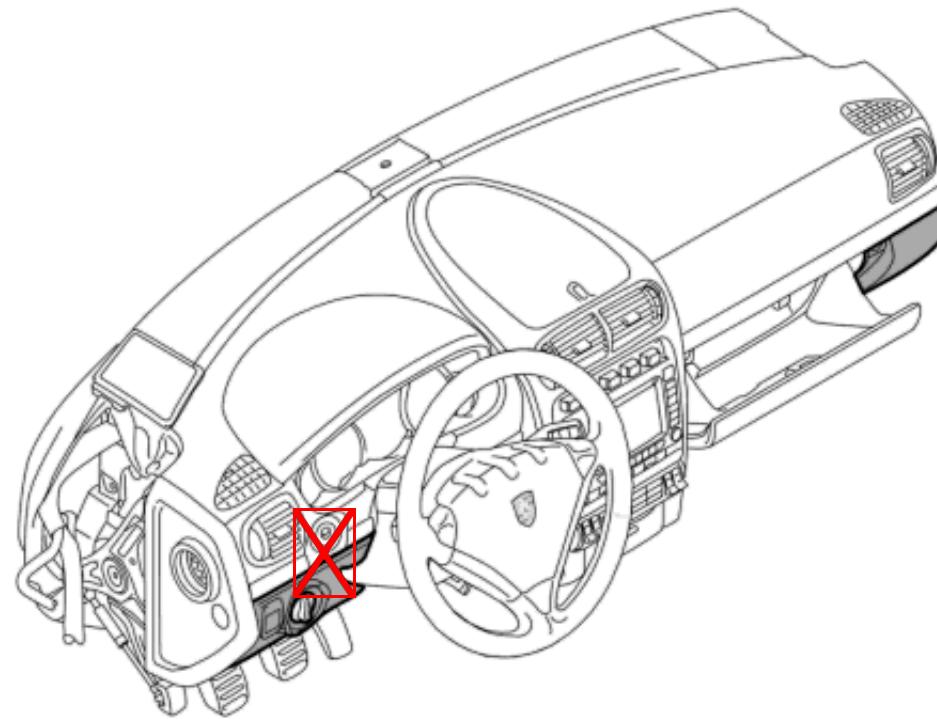


1. Insert the trim panel under the dashboard on the driver's side.

- 1.1. Insert trim under the dashboard on the driver's side **-4-** into the guides **-11-** **-arrow A-**.

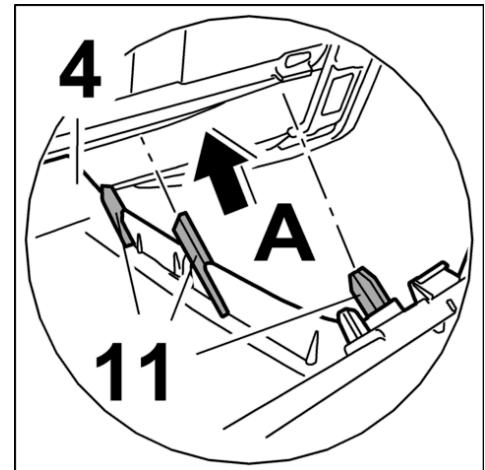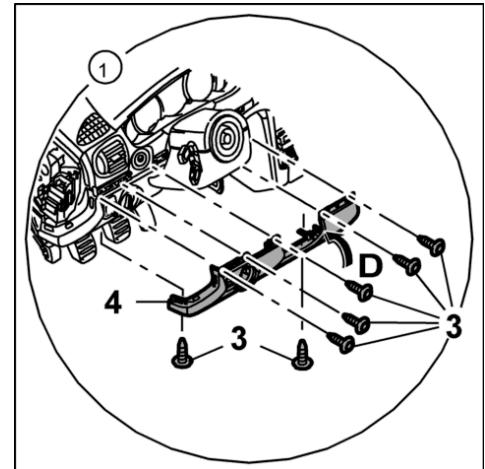


2. Clip in the bowden cable for the parking brake release.


- 2.1. Clip the ball joint **-9-** and sleeve **-8-** of the bowden cable into the release lever **-10-** until they engage audibly. Make sure that the fastening clip **-arrow-** of the sleeve **-8-** is not damaged.

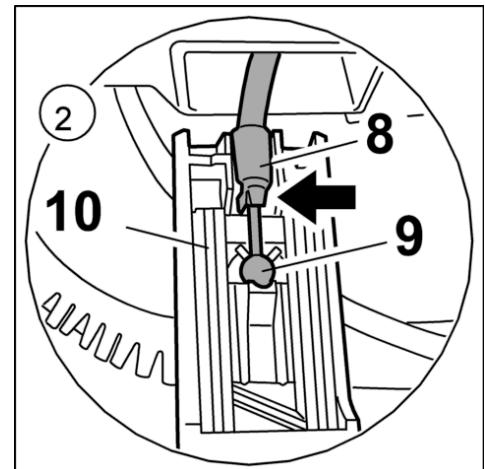


3. Push on the plug **-6 and 7-** until the locking tabs engage audibly **-arrows B-** .
4. Install trim under dashboard on the driver's side.

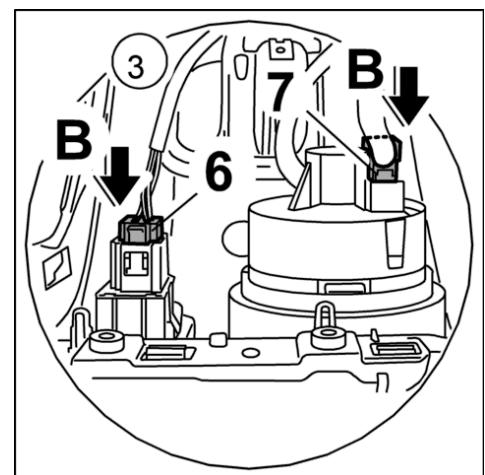


- 4.1. Insert trim under the dashboard on the driver's side **-4-** over the guide **-5- -arrow C-** .

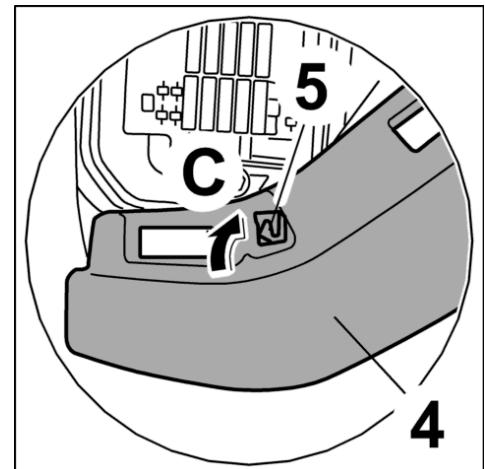


4.2. Swivel the trim under the dashboard on the driver's side **-4-** upwards **-arrow D-**.

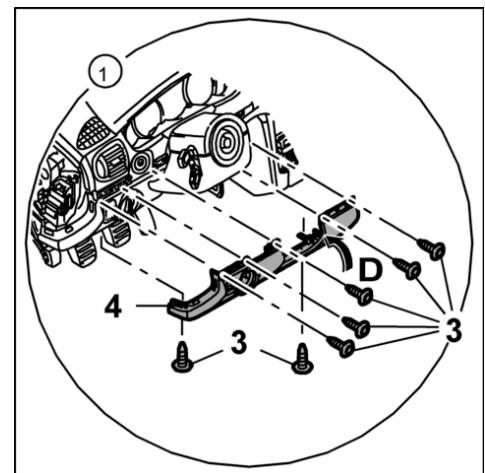

4.3. Screw in **-3-** fastening screws.

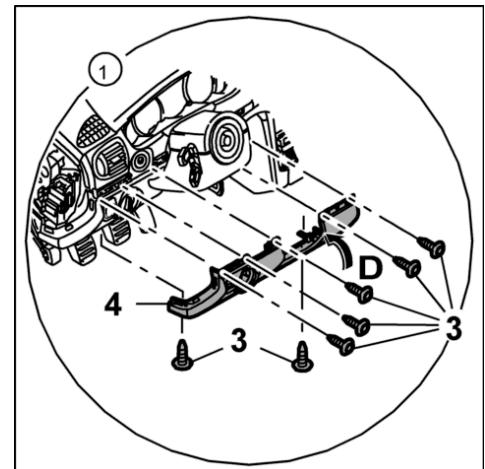


5. Install fuse box cover.
 - 5.1. Insert front fuse box cover **-1-** (**arrow E-**).
 - 5.2. Swivel fuse box cover **-1-** inward and push it in **arrow F-** until the retaining clips **-2-** engage audibly.
6. Install cover under dashboard on driver's side.→ 702219 Removing and installing cover under dashboard - "Installing" section
7. Install dashboard moulding on driver's side.→ 705819 Removing and installing dashboard moulding - "Installing" section

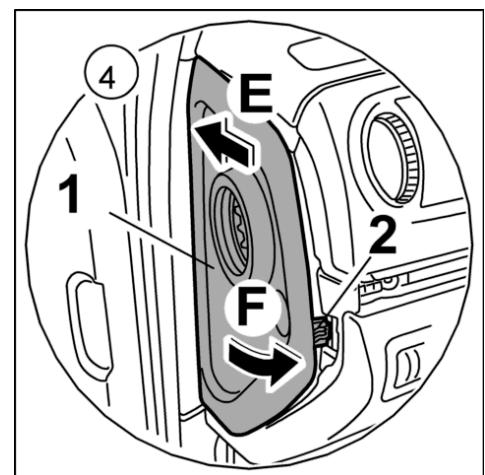


Installing the cover under the instrument panel on the passenger's side

Installation Location:

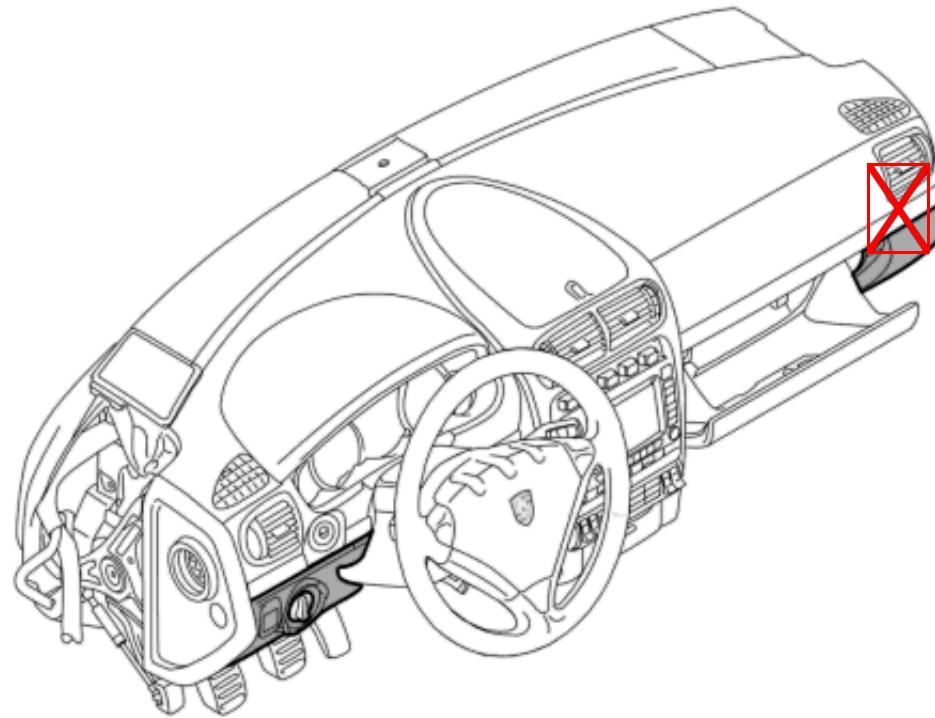


1. Insert the trim under the dashboard on the passenger's side.


- 1.1. Move the trim under the dashboard on the passenger's side **-3-** until the plug can be plugged in.

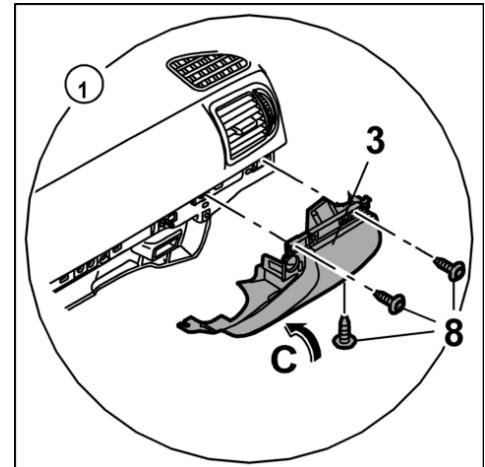


2. Push on the plug **-10-** until the locking tabs engage audibly (**-arrow A-**).
3. Install trim under instrument panel at front passenger's side.

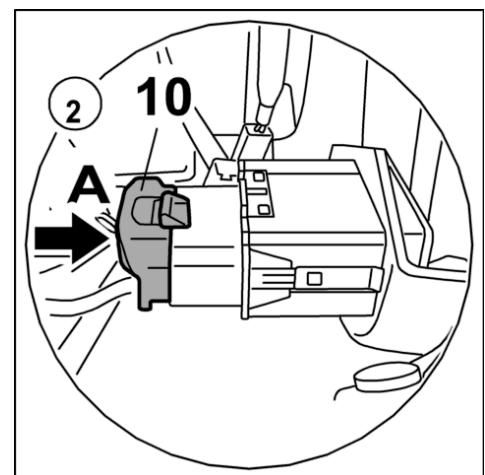


- 3.1. Insert trim under the dashboard on the driver's side **-7-** over the guide **-9-** (**-arrow B-**).

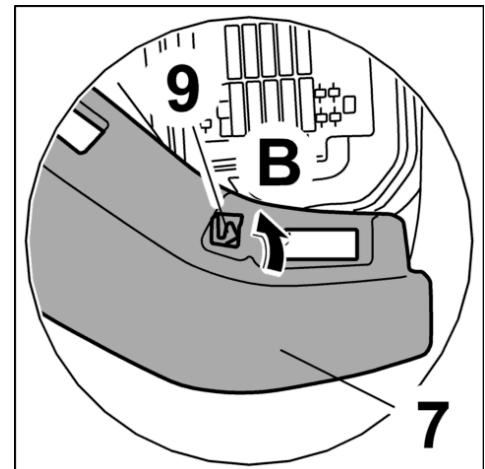

- 3.2. Swivel the trim under the dashboard on the passenger's side **-3-** upwards (**-arrow C-**).

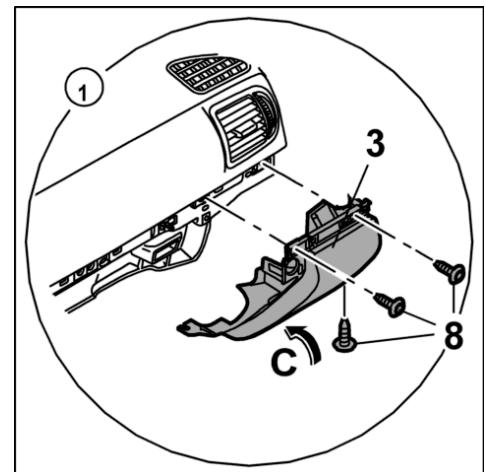


- 3.3. Screw in **-8-** fastening screws.

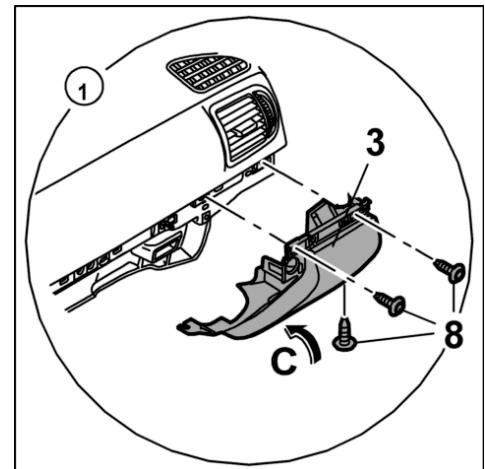


4. Install fuse box cover.
 - 4.1. Insert front fuse box cover **-5-** (**arrow D-**).
 - 4.2. Swivel fuse box cover **-5-** inward and push it in (**arrow E-**) until the retaining clips **-6-** engage audibly.

5. Secure the glove compartment.
 - 5.1. Screw in fastening screws **-2-** and tighten to the specified tightening torque. → **Tightening torque: 1.0 ftlb. +/-0.15 ftlb.**
 - 5.2. Open glove compartment lid **-1-** .
 - 5.3. Insert rubber buffer **-3-** , screw in fastening screw **-4-** and tighten to the specified tightening torque. → **Tightening torque: 1.0 ftlb. +/-0.15 ftlb.**
 - 5.4. Close glove compartment lid **-1-** .

6. Install cover under dashboard on passenger's side. → 702219 Removing and installing cover under dashboard - "Installing" section

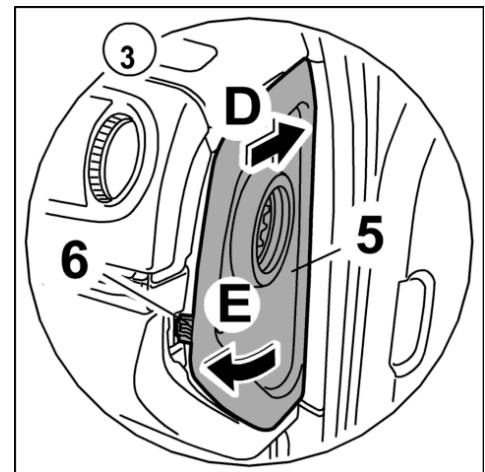

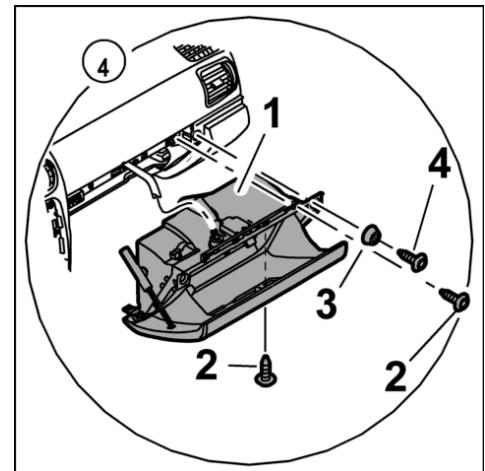

7. Install dashboard moulding on passenger's side. → 705819 Removing and installing dashboard moulding on passenger's side - "Installing" section

9PAAD1, 9PAAD7, 9PAAE1, 9PAAE7, 9PAAF1, 9PAAJ1

as of MY 2003

Country C00, C02, C05, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C45, C46, C98, C99